





3311A Roblin Boulevard
Winnipeg, Manitoba, Canada R3R 0C2
Tel: (204) 254-5623 Fax: (204) 257-3190
Website: www.fjoracing.com
E-mail: techsupport@fjoracing.com

Firmware Upgrade Instructions


1. Download the firmware file from www.fjoracing.com and save it on your PC.
Note: DO NOT save the file to your WINDOW's DESKTOP
2. Run the PC program for your controller
3. Select the controller upgrade function

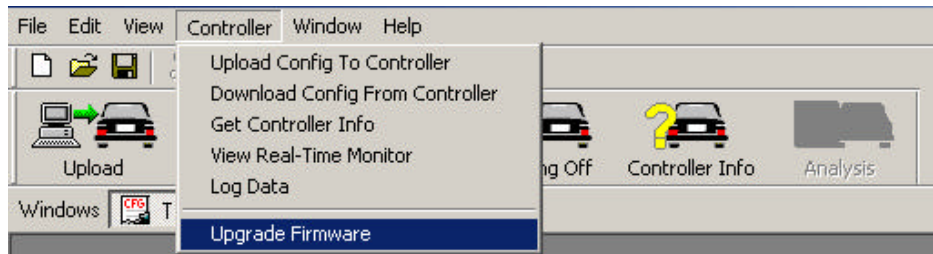


4. You will see this window – select YES to continue

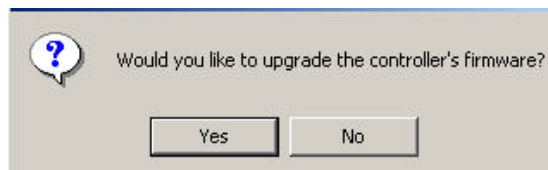

5. Now select the firmware file that will be loaded into the controller. This is the file that you downloaded and saved in step 1. If it is not displayed in the window, you will need to open the directory that you saved it to by navigating to it using the "Look in:" menu

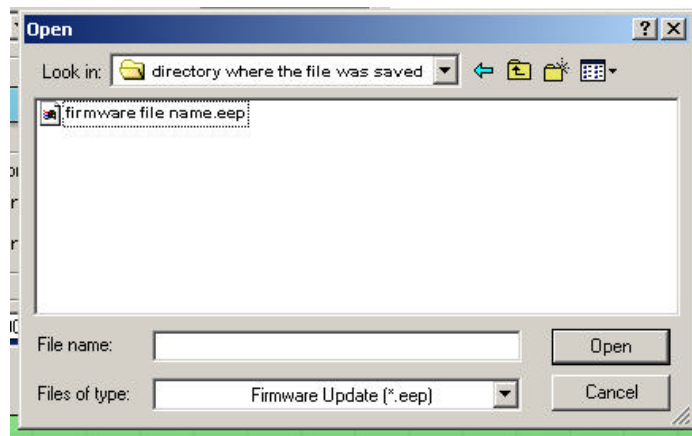


6. Once you have selected the file, click "Open". You will see the this window:

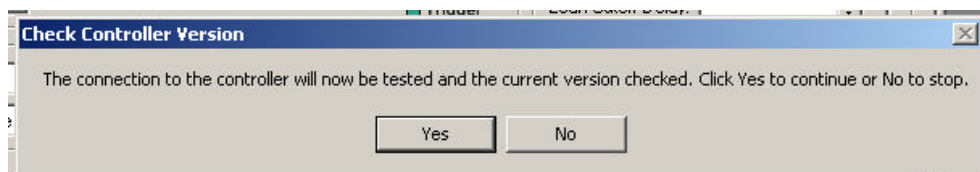

Be sure the PC is connected and the controller is turned on before proceeding.

7. If the controller fails to respond, you will see an error message:

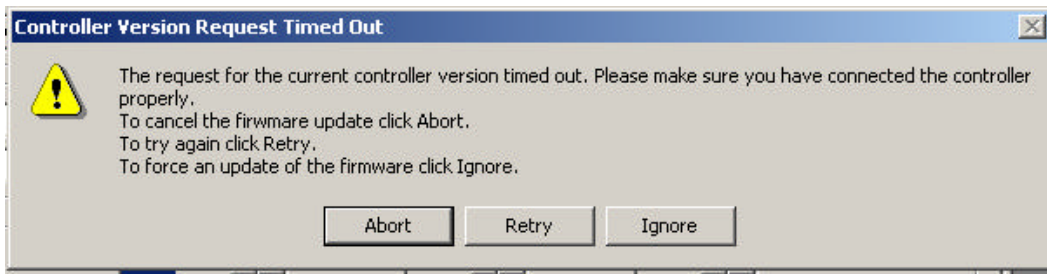

8. If this is your first attempt, select "Retry", otherwise you must cycle the power on the controller and then select "Ignore"
9. At this point the controller will be downloaded. Once it has completed you will see a status indicating if the update was successful.

Note: Be sure that the version of your software matches the version of the firmware on the controller. Example: program version 2.x works with firmware version 2.z

For assistance with updating your product, contact FJO Support.

fjotechsupport@fjoracing.com
(204) 254-5623 ext 3 [Monday-Friday 9am-5pm CST]