

LT4 Supercharger Lid Jetting

Select the desired horsepower level and fuel type to determine the nitrous and fuel jet requirements i.e. if you want a 50 HP boost you would use a .035 Nitrous and a .018 Fuel jet. This jetting only applied to the Nitrous Express Supercharger lid with the built in nitrous/fuel passages (nitrous jet fitting on the passenger side and the fuel jet fitting on the driver side of lid when installed on the vehicle)

CHECK ALL JETS FOR OBSTRUCTIONS UPON INSTALLATION!!!!!!!

LT4 Lid (Integrated) Jetting			
HP	N20	Gas	E85
50	35	18	22
75	41	22	26
100	52	27	31
150	62	31	36
200	73	35	41
250	82	38	45
300	99	42	49

This jetting chart is for informational purposes only, NX is not responsible for misuse or misapplication.