



**Nitrous Express Inc.**

5411 Seymour Hwy Wichita Falls, TX 76310

tel 940-767-7694 Fax 940-687-0751

www.nitrousexpress.com

## NX RPM Activated Window Switch PN: 18959

**IMPORTANT:** Read the instructions before attempting the installation

- The RPM Activate Window Switch can be connected to any style ignition system.
- The Window Switch is capable of carrying 1 amp. If the circuit you are activating requires more current, an NX Relay, PN 15515 (Relay & Pigtail) or 15526 (Relay only) must be used.
- The RPM Window Switch has a circuit that activates a device by providing a ground path at a desired RPM.. The ground will be removed at a different rpm to deactivate the device.

### PROGRAMMING THE UNIT

PRESS BOTH BUTTONS AND HOLD UNTIL "PRO" IS DISPLAYED LEFT BUTTON MOVES CURSOR RIGHT BUTTON INCREMENTS VALUE

1: RPM Multiplier  
 0=COIL TRIGGER FULL  
 SEQUENTIAL  
 1=COIL TRIGGER WASTE SPARK  
 2~8 TACH SIGNAL 4=CYL 8=8CYL

2: Lo RPM Trigger  
 15.0=15,000RPM 00.9=900RPM

3: Hi RPM Trigger

RUN MODE DISPLAY:  
 XX.X RPM

PRESS LEFT BUTTON TO SEE Low RPM  
 PRESS RIGHT BUTTON TO SEE High RPM

