

Max 5 software/firmware Update


You will need to download the newest version of the Maximizer 5 software and firmware.

You can download the newest version from the following web address:

<http://www.nitrousexpress.com/downloads.html>


The screenshot shows the NX Nitrous Express website. At the top, there is a navigation bar with links for Home, Products, Dealers, Contact Us, Instructions, and Jetting. A search bar is located on the right side of the navigation bar. Below the navigation bar, there is a sidebar on the left with a 'Shop By Vehicle' section containing dropdown menus for Year, Make, Model, and Engine. The main content area is titled 'NX Downloads Page Magazine Articles' and lists several articles. A prominent section is titled 'Software/Firmware Downloads' with a sub-section for 'MAXIMIZER 5'. A hand-drawn arrow points to the 'Maximizer 5 Software/Firmware - Download' link. Below this, there are links for 'Maximizer 5 Installation and user manual - Download'. Other sections include 'MAXIMIZER 4' with links for software/firmware, firmware update, and installation manual, and 'MAXIMIZER 3' with links for software/firmware and installation manual. At the bottom, there is a section for 'BOOST REFERENCE PROGRESSIVE' with links for software/firmware, installation manual, and upgrade instructions.

1. Once the file has downloaded, you will need to unzip or extract the files.

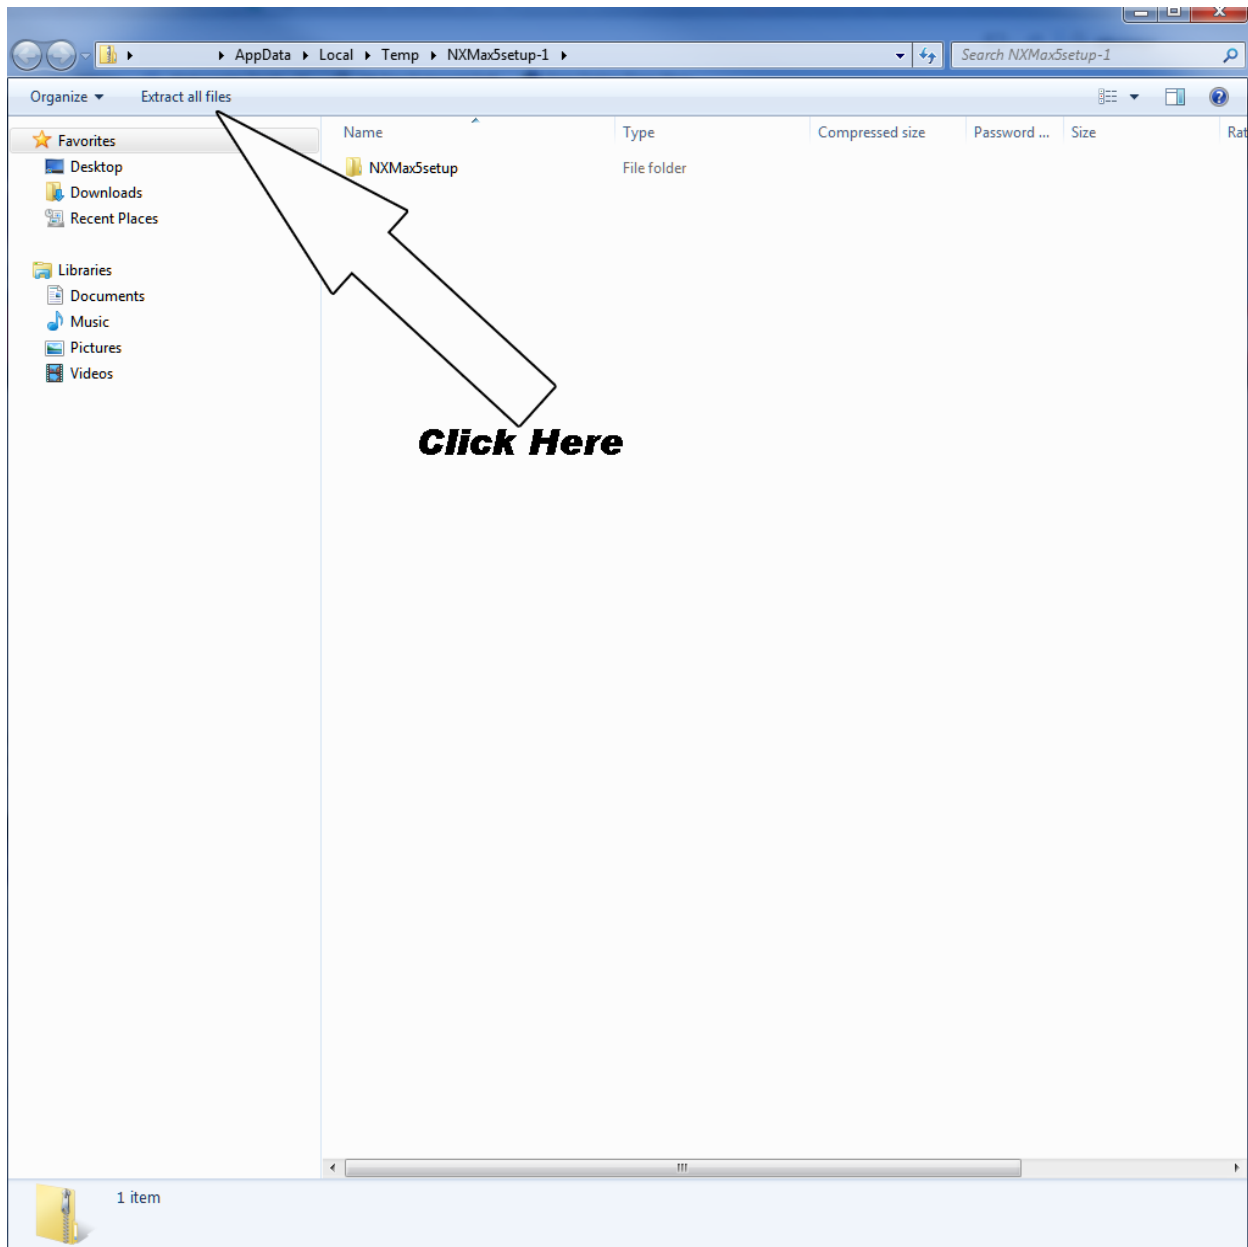


2. Once the files are extracted you can click on the “NXMax5Setup” folder and then you will see the “nxMax5MonitorInstaller_V5_xx”. Double click the icon and follow the on screen prompts for installing the Max 5 software.

3. If your Max 5 needs to have the firmware updated, you can go into the Max 5 software and click on “Help” at the top of the page, or simply push “F12” on the keyboard to bring up the update firmware screen.

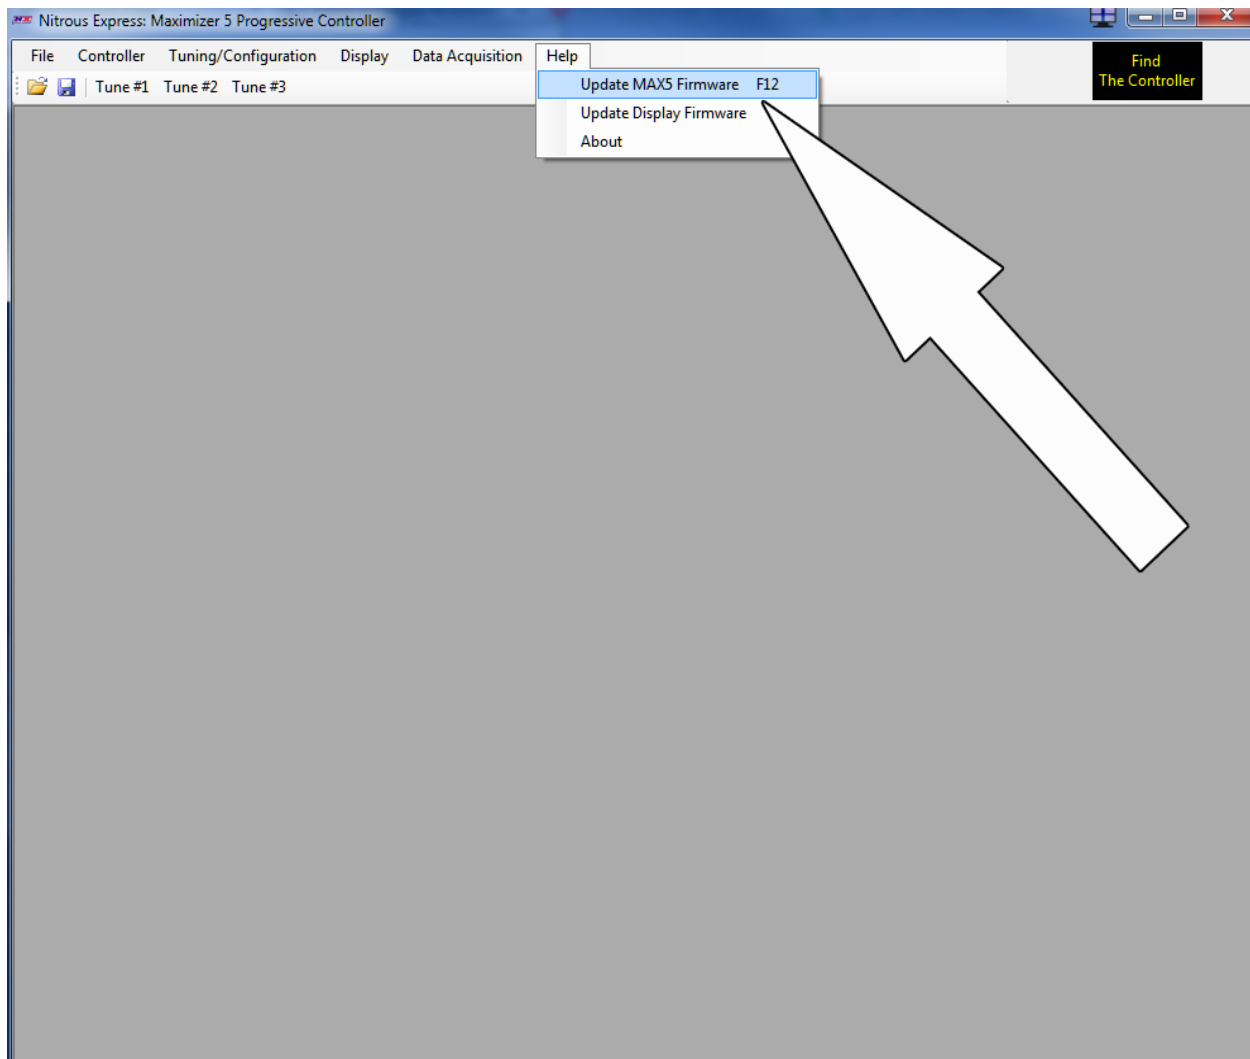

4. Make sure your Max 5 is powered up (verify by making sure the light on the Maximizer 5 is lit up) and plugged in to your computer via the supplied USB cable.

5. Click on Browse and find the “.nxb” file to update the Max 5 Firmware, the file location should be found at "C:\Program Files (x86)\Nitrous Express\Maximizer 5 v5.0x\nxMax5.nxb"

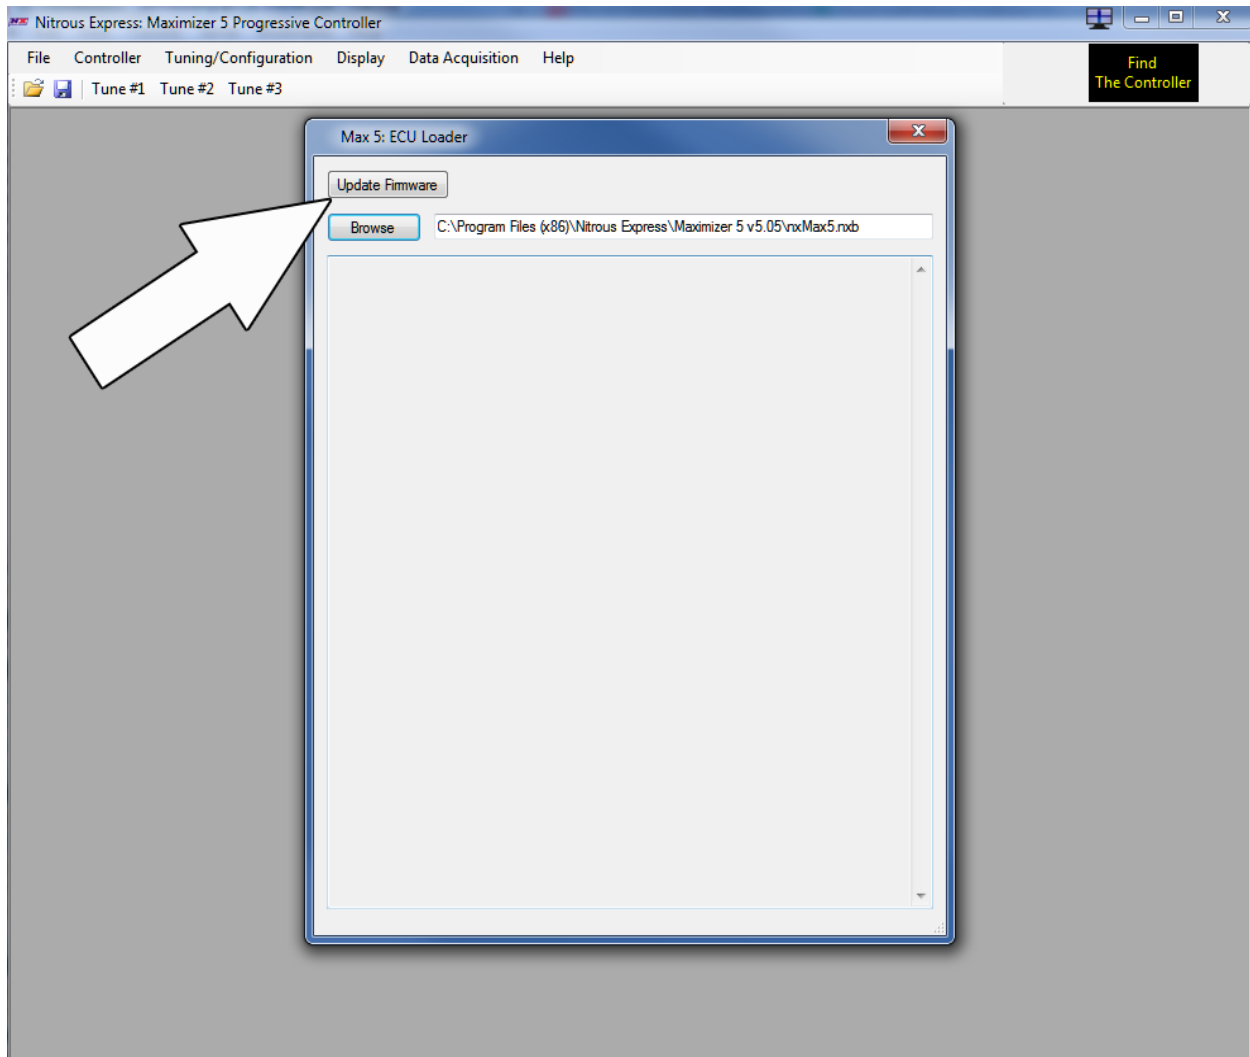

6. Once you select the file to upload into the Max 5 as mentioned in step 4, simply click "Update Firmware". Once this process is complete, your Max 5 is updated and ready to use.