




Billet Bottle Bracket Instructions

PN: 11108B


Assemble the brackets on the bottle with the brackets approximately 7.5 inches apart. The bottle brackets should be secured to the roll cage in the vehicle using the supplied bar mounts. Make sure the bottle is facing where the feed-line is facing down if mounted horizontally. If you chose to mount the bottle in an upright (vertical) position the feed-line must face forward. Using these mounting techniques will provide for the proper orientation of the siphon tube in the bottle to pick up liquid nitrous in all situations.

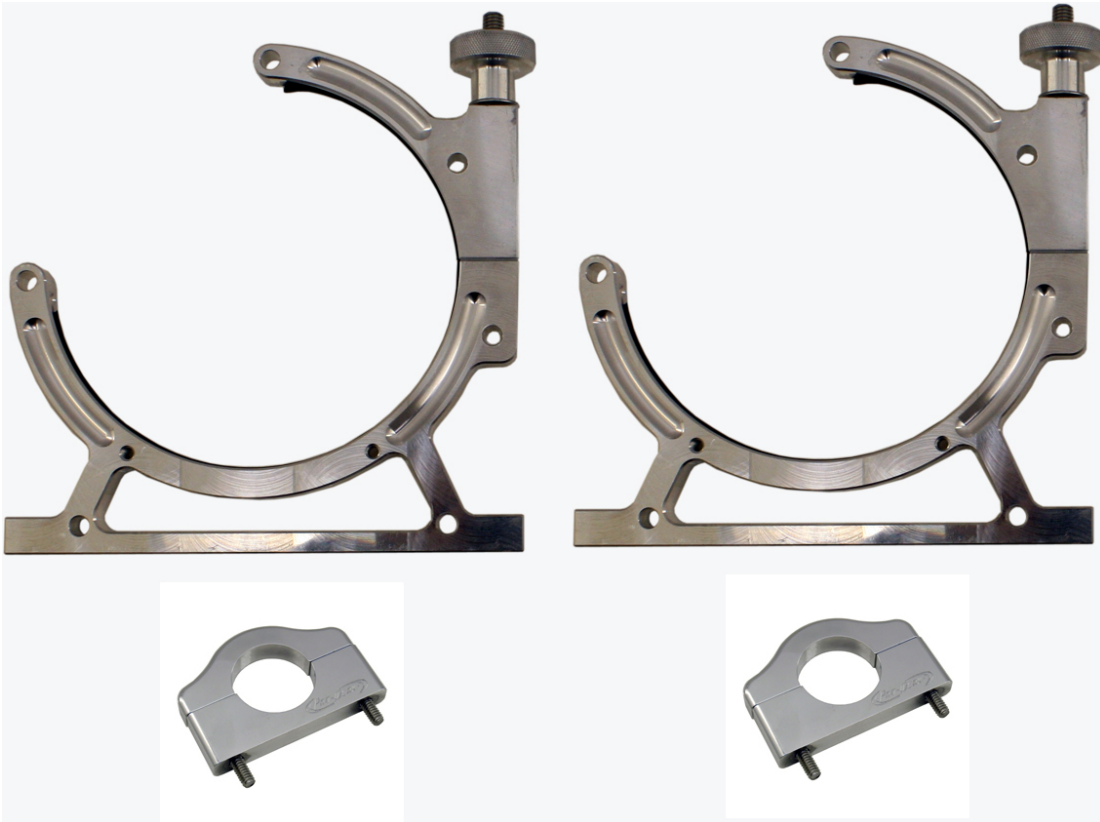

Mounting the Bottle

The bottle should be mounted in the trunk area or outside of the passenger compartment. If this is not possible or practical a NHRA approved blow down tube and vent fitting (PN 11708 and 11709) must be installed. The best positioning of the bottle is shown in DIAGRAM A.

DIAGRAM A

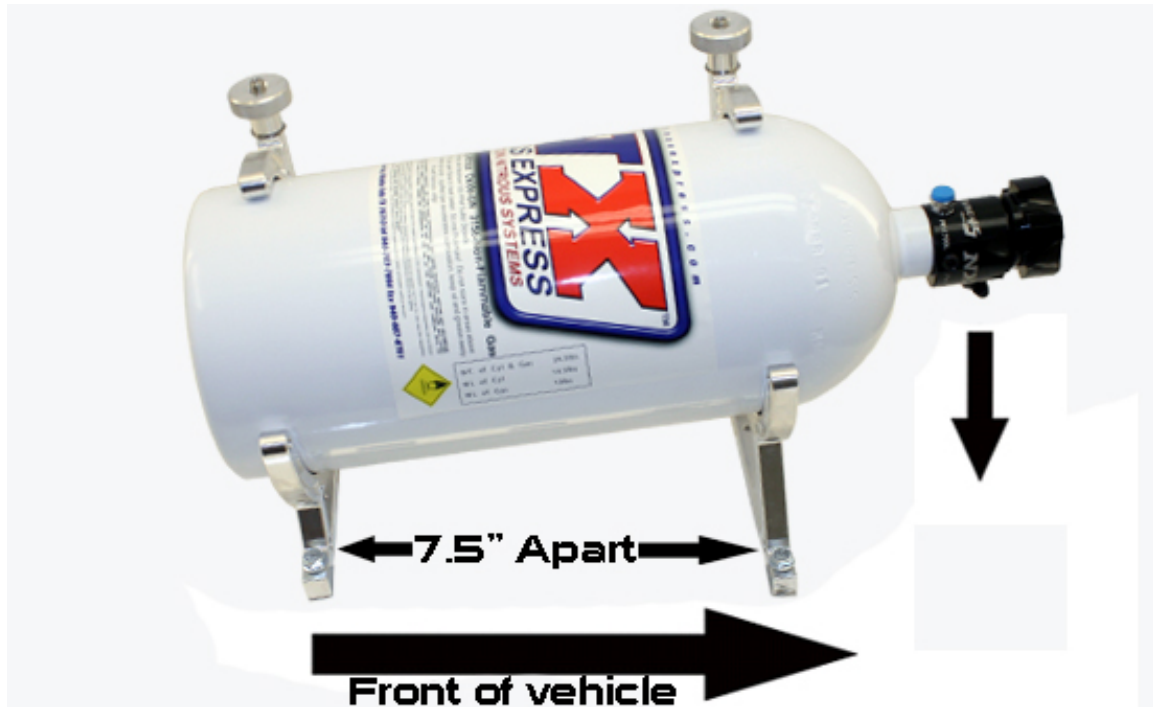

Mounting the bottle in this manner will allow the internal siphon tube to be covered with liquid nitrous at all times and properly supports the bottle.